

Motor replacement

LR-2680 fogger

1. Preparation

- a. Unplug fogger from wall outlet.
- b. Power switch should be in the off position.

2. Remove the old motor.

- a. Remove the two screws depicted below.



- b. Detach the old motor head.



c. Pull out the old motor.



d. Unplug the wires from the motor.



3. Transfer the rubber gasket from the old motor to the new motor.

- a. Pull out the rubber gasket from the old motor.




- b. Install the rubber gasket on the new motor.



4. Install the new motor.

- a. Plug wires into the new motor. The yellow/green wire is ground.

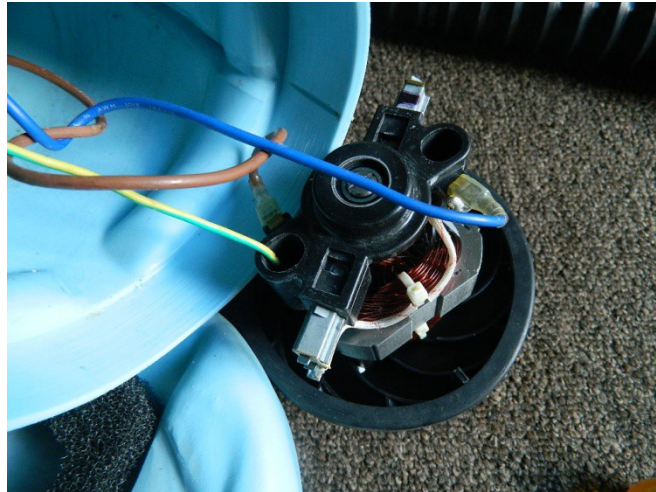


- b. Reinsert the motor.



c. Reinstall the motor head.



d. Replace the two screws that you removed earlier.

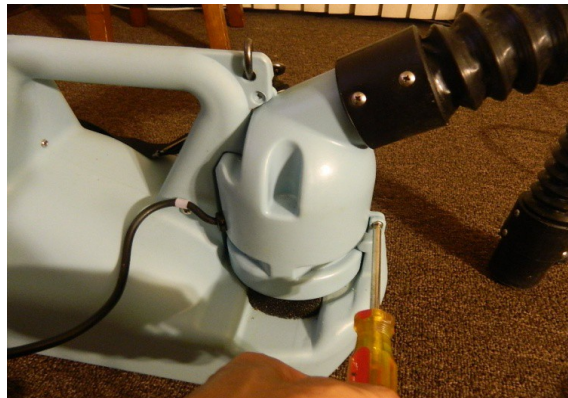

5. You're done!