


# Longray

## Stainless Steel Sprayer Viton Gasket Kit

### How to replace the Internal O-ring

- 1. Remove pump from tank.**
- 2. Push rod in and twist to lock.**
- 3. Pull apart.** With one hand pulling the handle and other hand around the pump cylinder, pull apart using a strong force.
- 4. Replace the Internal O-ring.** It should go on loosely.
- 5. Lubricate the Internal O-ring.** Use e.g. vegetable oil, WD-40, etc...
- 6. Reinstall the pump rod.** It helps to initially insert at an angle. Make sure the Internal O-ring stays sandwiched between the metal discs.
- 7. Push down on the handle until it is fully seated.** There should be no gap at the top.

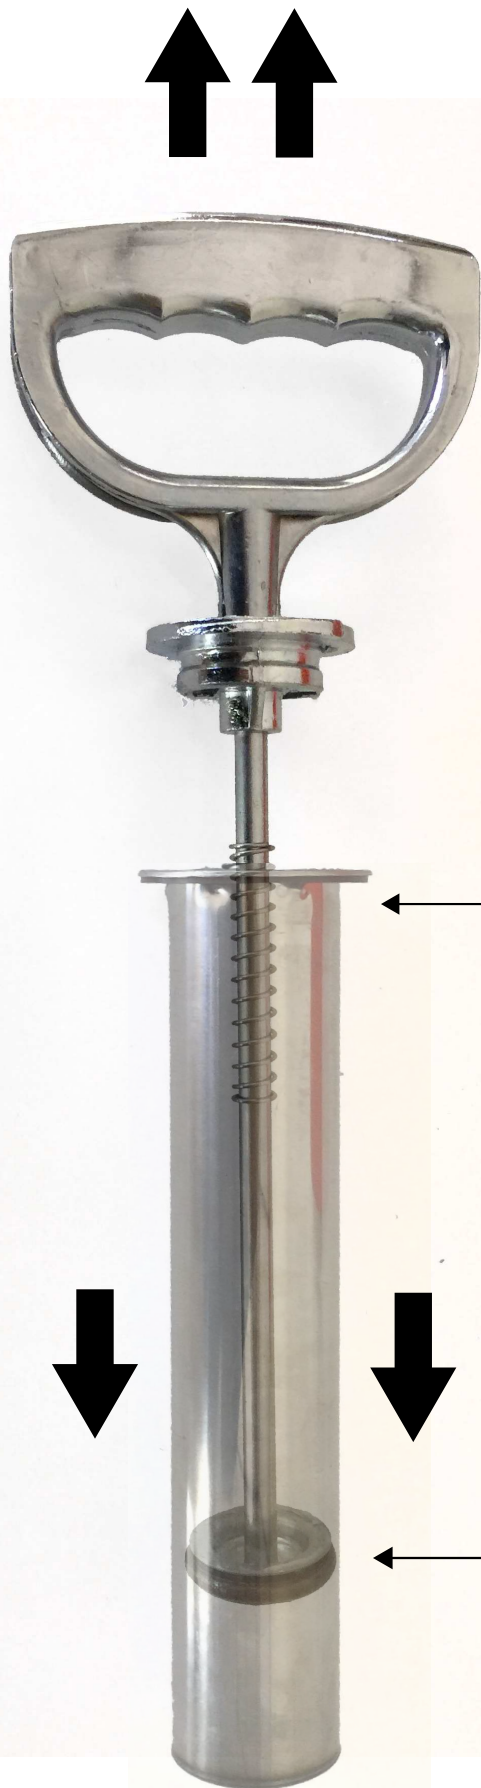

Internal  
O-ring

Check  
Valve

