



Tire Valve Replacement Guide

1. Prep

- 1.1. Empty the tank and rinse it (you'll need to reach inside the tank).
- 1.2. Remove the pump cylinder.

2. Remove the tire valve.

- 2.1. Take off the tire valve cap.
- 2.2. Locate the hex nut at the base of the tire valve stem. Use a wrench to loosen and then remove the hex nut by turning counter-clockwise.



- 2.3. With a strong force, **push** the valve into the tank and retrieve it from the tank.




- 2.4. The plastic washer and metal washer will also come out, keep them for later.

3. Install the new tire valve

- 3.1. Remove the valve cap and the tighten nut
- 3.2. Place the sprayer tank sideways on the floor. Then carefully put the tire valve inside the tank and through the opening.



- 3.3. If you have trouble guiding the stem through the opening, it may help to wrap a wire around the tire valve.

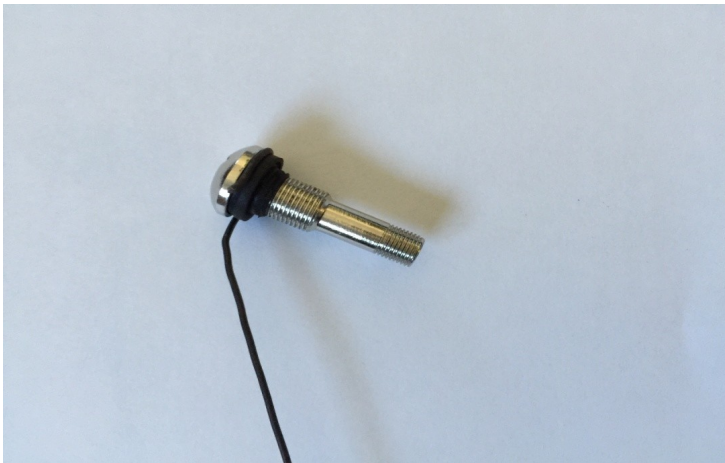

- 3.4. With the stem now sticking out, install around it first the plastic washer, then the metal washer, and finally the metal hex nut.
- 3.5. Use a wrench to tighten the hex nut.

You're done!