Valve replacement - TS35N



Tools required: TWO (2) wrenches

To uninstall/install, repeat the following for each of the 3 side connectors:

While holding the brass nut on the valve FIXED with the first wrench, use the second wrench to loosen/tighten the silver tube nut.

IMPORTANT: As you turn the silver tube nut, do not allow the brass nut on the valve to turn, otherwise you may damage the valve box.